 
 
 



STRATLOCK SL RANGE

SL-FB & SL-FB-FR INSTALLATION GUIDE









SL-FB Stratlock® Range - Screw Fix

SL-FB-FR Stratlock® Range - Screw Fix - Fire Rated

| SL-FB | SL-FB-FR | USE WITH: | INSTALL WITH: |
|--|---|--|--|
|  |  | SL-M10, SL-M18, SL-M18-FR  | #8 screws #5 screws CP-01ST  |

INSTALLATION STEPS

Screw-fix method - follow same steps for fire-rated Stratlock clips
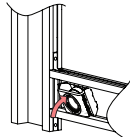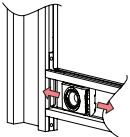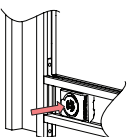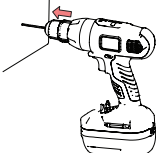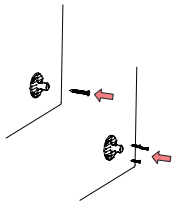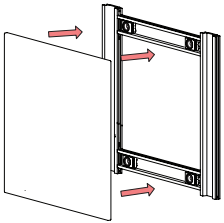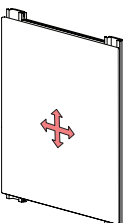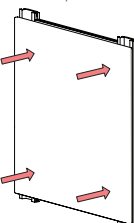
| | | | |
|---|---|---|---|
| <p>1 Push fit SL-FB into frame</p>  | <p>2 Locate SL-FB into correct position</p>  | <p>3 Insert CP-01 ST into SL-FB and press panel into correct position, marking the panel</p>  | <p>4 Drill out mark created by CP-01ST with 3mm drill bit</p>  |
| <p>5 Install SL-M18 with 1 x #8 screw through centre or 3 x #5 screws through base</p>  | <p>6 Engage panel to first click into SL-FB</p>  | <p>7 Adjust panel to find correct position</p>  | <p>8 Once panel is in correct location, engage second click by pressing panel into final position</p>  |


Stratlock SL-RLE shown.

STRATLOCK SL RANGE

SL-FB INSTALLATION GUIDE


SL-FB Stratlock® Range - Adhesive Fix

SL-FB

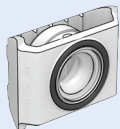

USE WITH:

 SL-M10, SL-M18




INSTALL WITH:


A 2 part epoxy

INSTALLATION STEPS Adhesive fix method


1 Push fit SL-FB into frame

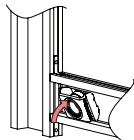


2 Locate SL-FB into correct position

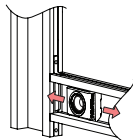


3 Engage SL-M18 two clicks into SL-FB

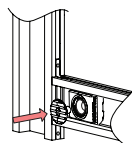


4 Apply a 2 part epoxy adhesive to SL-M18

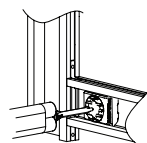


5 Press panel into place

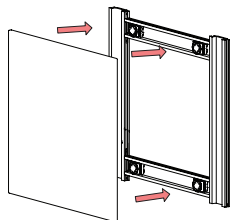


6 Use panel support while adhesive dries

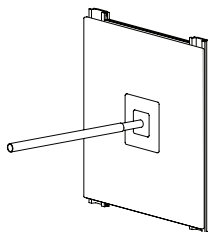

7 Once adhesive has dried, remove panel. Replace and engage only one click to adjust panel around the SL-M18's point

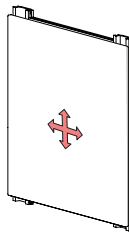

8 Once panel is in desired location, engage second click by pressing panel into its final position

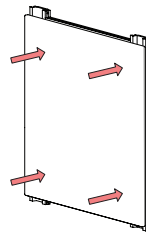

Stratlock SL-RLE shown.