

# STRATLOCK SL RANGE

## SL-RCF90 INSTALLATION GUIDE

 
**STRATLOCK**

### SL-RCF90 How to fit connector - building a wall

**SL-RCF90**





**USE WITH:**

SL-RLE



Grub screws (supplied)

  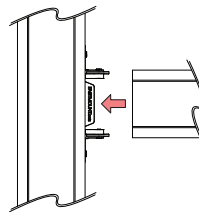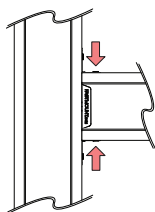2.5mm hex key

 Slide SL-RCF90 into groove  
of SL-RLE

 Tighten grub screws with  
2.5mm hex key or right  
angle drive for battery drill

 Insert horizontal SL-RLE  
profile end into SL-RCF90

 Tighten grub screws with  
2.5mm hex key


# STRATLOCK SL RANGE

## SL-RCF90 INSTALLATION GUIDE

### SL-RCF90 How to build a wall

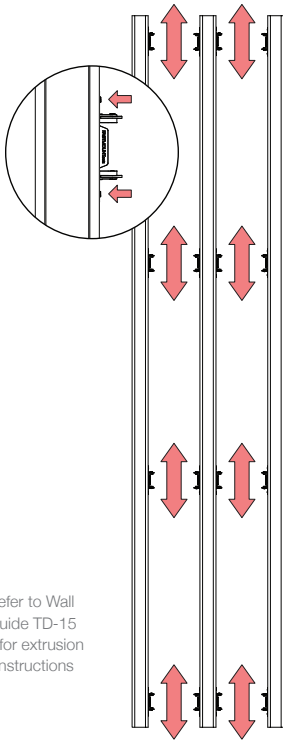
SL-RCF90



#### USE WITH:

- |        |                                |
|--------|--------------------------------|
| SL-RLE | Grub screws (supplied)         |
|        | Packers if required            |
|        | Appropriate substrate fastener |
|        | 2.5mm hex key                  |

Slide SL-RCF90 into groove of vertical SL-RLE and tighten grub screws with 2.5mm hex key to secure.



NOTE: Refer to Wall Layout Guide TD-15 & TD-16 for extrusion spacing instructions

Insert profile end of horizontal SL-RLE into SL-RCF90, tighten grub screws with 2.5mm hex key to secure.

