

STRATLOCK SL RANGE

SL-RCF90 INSTALLATION GUIDE

SL-RCF90 How to fit connector - building a wall


SL-RCF90



USE WITH:


SL-RLE

Grub screws (supplied)

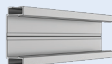


0.1" hex key


Slide SL-RCF90 into groove of SL-RLE

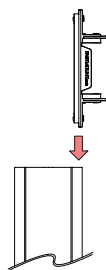

 
Tighten grub screws with 0.1" hex key or right angle drive for battery drill



Insert horizontal SL-RLE profile end into SL-RCF90

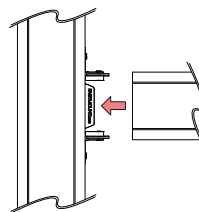

Tighten grub screws with 0.1" hex key

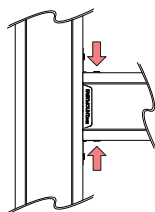

STRATLOCK SL RANGE

SL-RCF90 INSTALLATION GUIDE

SL-RCF90 How to build a wall


SL-RCF90



USE WITH:

- | | |
|--------|--------------------------------|
| SL-RLE | Grub screws (supplied) |
| | Packers if required |
| | Appropriate substrate fastener |
| | 0.1" hex key |

Slide SL-RCF90 into groove of vertical SL-RLE and tighten grub screws with 0.1" hex key to secure.

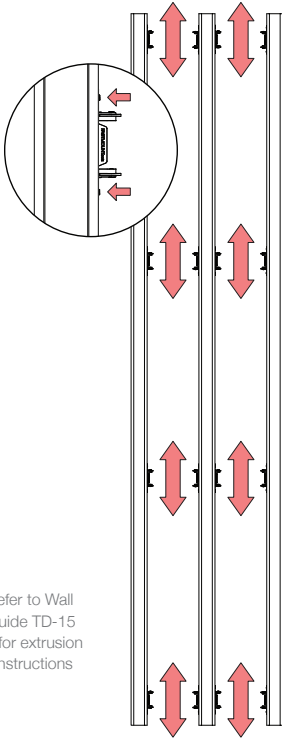

NOTE: Refer to Wall Layout Guide TD-15 & TD-16 for extrusion spacing instructions

Insert profile end of horizontal SL-RLE into SL-RCF90, tighten grub screws with 0.1" hex key to secure.

