

STRATLOCK SL RANGE

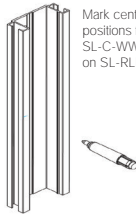
SL-C-WW90-FR HOW TO FIT CONNECTOR INSTALLATION GUIDE

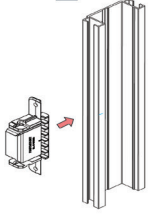
SL-C-WW90-FR

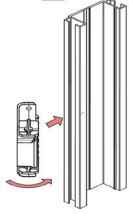
HOW TO FIT CONNECTOR to SL-RLE

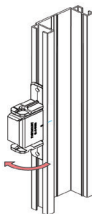
SL-C-WW90-FR	SL-RLE	USE WITH:	INSTALL WITH:
		8G panhead self tappers	1/8" drill bit

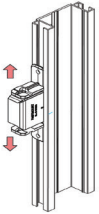
INSTALLATION STEPS

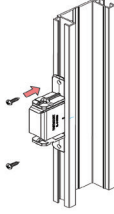
- 

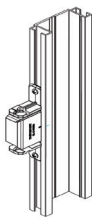
1 Mark center positions for SL-C-WW90-FR on SL-RLE
- 

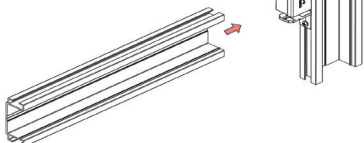
2 Insert SL-C-WW90-FR into SL-RLE, adjusting SL-C-WW90 until centerlines align
- 

3
- 

4
- 

5
- 

6 Secure SL-C-WW90-FR in position with 8G self-lapping panhead screws
- 

7
- 

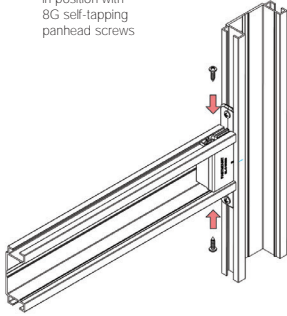
8 Slot perpendicular SL-RLE onto SL-C-WW90-FR

STRATLOCK SL RANGE

SL-C-WW90-FR HOW TO FIT CONNECTOR INSTALLATION GUIDE

9

Secure SL-RLE
in position with
8G self-tapping
panhead screws



10

