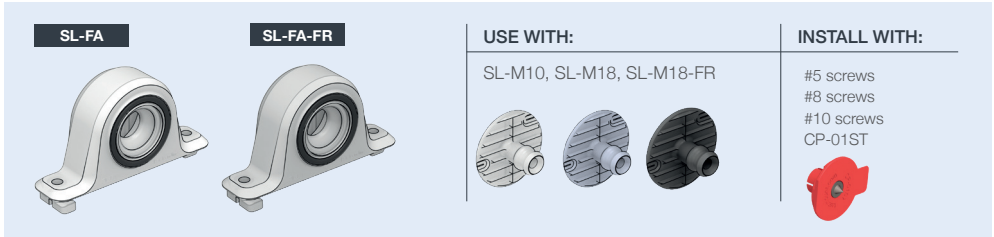# STRATLOCK SL RANGE
SL-FA & SL-FA-FR INSTALLATION GUIDE

SL-FA Stratlock® Range - Screw Fix
SL-FA-FR Stratlock® Range - Screw Fix - Fire-rated

SL-FA	SL-FA-FR	USE WITH:	INSTALL WITH:
		SL-M10, SL-M18, SL-M18-FR	#5 screws #8 screws #10 screws CP-01ST

INSTALLATION STEPS Screw-fix method - follow same steps for fire-rated Stratlock clips

1. Insert SL-FA into extrusion frame
2. Use twist-lock function to locate position
3. Use mallet to press SL-FA into frame
4. Slide SL-FA horizontally into final position if required
5. Use 2 x #10 screws or #5 rivets to fix into place
6. Insert CP-01 ST into SL-FA and press panel into correct position, marking the panel
7. Drill out mark created by CP-01 ST with 0.1" drill bit
8. Install SL-M18 with 1 x #8 screw through centre or 3 x #5 screws through base
9. Engage panel to first click of SL-M18 into SL-FA
10. Adjust panel to find correct position
11. Once panel is in correct location, engage second click by pressing panel into final position.

Stratlock SL-RLE shown.

FASTMOUNT