

STRATLOCK SL RANGE

SL-RCA180 INSTALLATION GUIDE

STRATLOCK

SL-RCA180 How to fit connector - building a wall to ceiling connection

SL-RCA180

USE WITH:


- SL-RCF90
- Grub screws (supplied)
- Socket screws (supplied)
- 2.5mm hex key
- 3mm hex key




Remove grub screws from teeth of SL-RCF90




Slide SL-RCF90 into groove of horizontal SL-RLE




Tighten grub screws with 2.5mm hex key once in position




Insert SL-RCA180 into profile end of vertical SL-RLE




Tighten grub screws with 2.5mm hex key

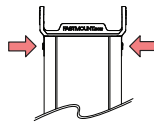

Insert SL-RCF90 into SL-RCA180

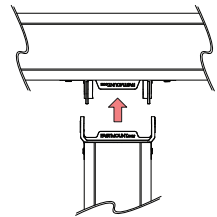

Insert socket screws and fasten enough to hold connectors together

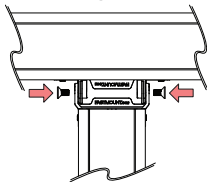

Adjust horizontal rail to desired angle, tighten socket screws with 3mm hex key

