How to guides

Attaching heavyweight panels with hidden fixings.

Tools

20mm drill bit



CT-09



CT-09DG



MC-IT5



MC-CP5

Clips



MC-M5



MC-F10

Fastmount Layout Guide TD-09

Panel and substrate



LightBeton by Plytech 19mm panel weighing 16.5kg/ m2 90 x 45 Pine framing





Installation steps

Installing MC-F10 into substrate












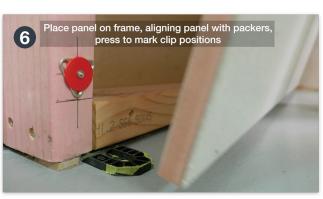





For further info and inspiration visit fastmount.com

Installation steps

Installing MC-M5 into panel and mounting









