














# STANDARD PC RANGE


## PC-F1A INSTALLATION GUIDE

### PC-F1A Self Tapping Female


PC-F1A	USE WITH:	INSTALL WITH:
	PC-M1B  PC-VM1  PC-M2H  PC-VMX 	CT-01  CT-07  CT-03  CT-10 
	PC-SM2  PC-SVMX  PC-SM2H  PC-SM1AC 	

### INSTALLATION STEPS FOR UPHOLSTERED PANELS


- 1** Drill hole through panel and frame

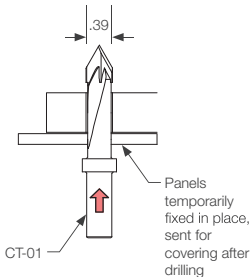

- 2** Drill out frame hole with CT-07

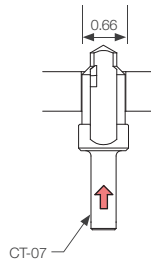

- 3** Screw fit PC-F1A with CT-03. Use battery drill with clutch set.

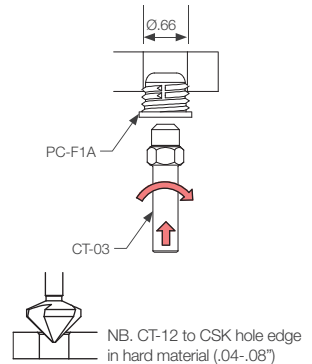


- 4** Screw fit PC-F1A into thin frame

PC-F1A can be used as screw / friction fit into thin frames and seat backs



NB. CT-12 to CSK hole edge in hard material (.04-.08")

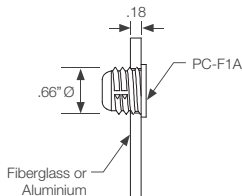

- 5** Cutaway view showing panel mounting

