










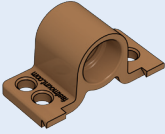


# STANDARD PC RANGE


## PC-RF1 INSTALLATION GUIDE

### PC-RF1 Side Mount Female


PC-RF1	USE WITH:	INSTALL WITH:
	PC-M1B  PC-VM1  PC-M2H  PC-VMX 	CP-01ST  CT-09  CT-10  CT-18DG 
	PC-SM2  PC-SVMX  PC-SM2H 	

### INSTALLATION STEPS


- 1 Screw fit PC-RF1 to side of frame

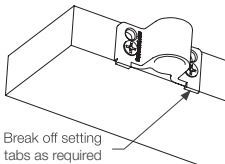


- 2 Fit CP-01ST into PC-RF1




- 3 Press panel onto CP-01ST to mark

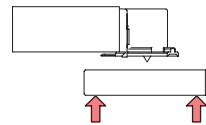


- 4 Drill panel on mark with CT-09

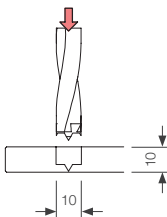

- 5 Screw fit male clip with CT-10

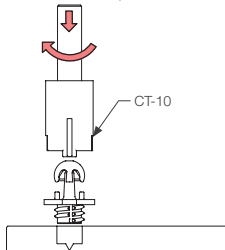


- 6 Panel clipped in place




### OPTION WITH ADHESIVE FIT MALE (COMPLETE STEP ABOVE)


- A Clip PC-SM2 into PC-RF1



- B Apply adhesive to PC-SM2



- C Place panel and support while adhesive dries

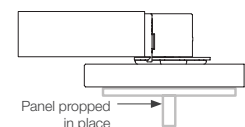

MORE INFO: Clip Layout Guide TD-02