

STRATLOCK SL RANGE

SL-RCA180 INSTALLATION GUIDE

SL-RCA180 How to fit connector - building a wall to ceiling connection

SL-RCA180

USE WITH:

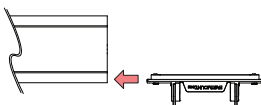
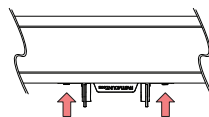
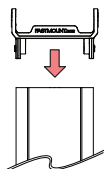
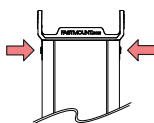
SL-RCF90

 Grub screws (supplied)
 Socket screws (supplied)

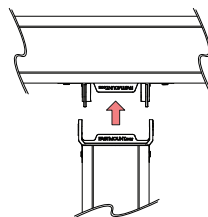
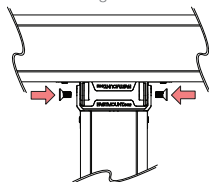
0.1" hex key

0.12" hex key


 Remove grub screws from
 teeth of SL-RCF90

 Slide SL-RCF90 into groove of
 horizontal SL-RLE

 Tighten grub screws with
 0.1" hex key once in
 position

 Insert SL-RCA180 into
 profile end of vertical SL-RLE

 Tighten grub screws with 0.1"
 hex key


Insert SL-RCF90 into SL-RCA180


 Insert socket screws and
 fasten enough to hold
 connectors together

 Adjust horizontal rail to desired
 angle, tighten socket screws
 with 0.12" hex key
