




METAL MC RANGE


MC-SM5-VHBFR INSTALLATION GUIDE


MC-SM5-VHBFR Metal Male Clip – Adhesive Mount Fire-rated


 <p>MC-SM5-VHBFR</p>	USE WITH:		INSTALL WITH:	
	<p>MC-F5 MC-F10</p>  <p>Note: Installation of wall panels only.</p>	<p>.80 drill</p> 	<p>#4 CSK screw</p>	

INSTALLATION STEPS MC-SM5-VHBFR to MC-F5

- Drill hole into support frame, fit MC-F5 or MC-F10 with MC-IT5 tool. Option: screw fix with #4 CSK screws

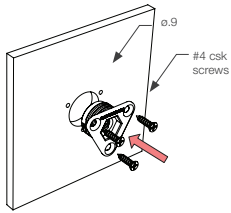
- Clip MC-SM5-VHB into female clip, and remove protective backing from adhesive

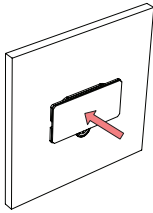
- Align panel into correct position and press firmly against substrate to fix.

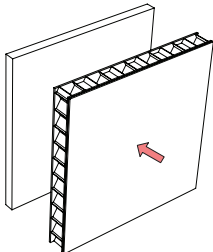

MORE INFO: SETOUT GUIDE TD-02, 09, 12. PRODUCT SHEET MC-05