

# METAL MC RANGE

## MC-SSM10 & MC-SSF10 INSTALLATION GUIDE

### MC-SSM10 & MC-SSF10 Pressed Metal Clip Range

MC-SSM10



MC-SSF10


**USE WITH:**


#6 gauge  
CSK screw

**INSTALL WITH:**



1"Ø drill bit


**INSTALLATION STEPS** Screw fix method


- 1** Drill 1" hole,  
0.2" deep in substrate

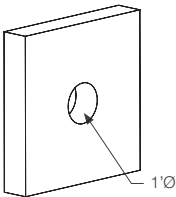


- 2** Insert MC-SSF10 and fix  
with 6G CSK screws

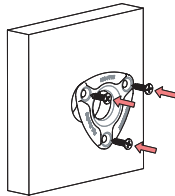


- 3** Insert MC-SSCP  
into MC-SSF10

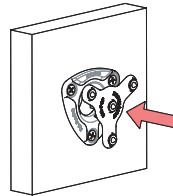


- 4** Press in location  
to mark panel

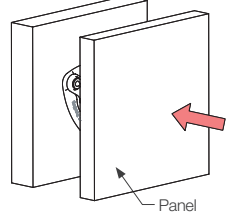


- 5** Drill 0.08" holes on marks

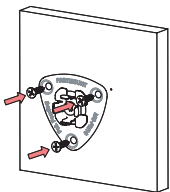

- 6** Insert MC-SSM10 and fix  
with three 6G CSK screws

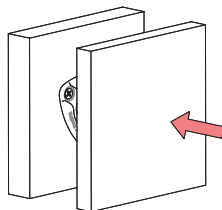

- 7** Install panel  
and position panel as required

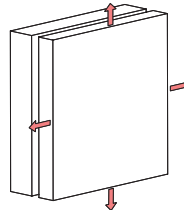

- 8** **OPTIONAL**  
Lock MC-SSM10 with  
centre 6G screw for precise  
installations requiring  
additional strength

