




# METAL MC RANGE


## MC-SM5-VHBFR INSTALLATION GUIDE


### MC-SM5-VHBFR Metal Male Clip – Adhesive Mount Fire-rated


MC-SM5-VHBFR	USE WITH:	INSTALL WITH:
	<div data-bbox="510 392 564 411">MC-F5</div> <div data-bbox="591 392 645 411">MC-F10</div>  <p data-bbox="497 507 660 544">Note: Installation of wall panels only.</p>	<div data-bbox="725 392 788 411">20Ø drill</div> <div data-bbox="837 392 900 424">#4 CSK screw</div> 

### INSTALLATION STEPS MC-SM5-VHBFR to MC-F5

- 1 Drill hole into support frame, fit MC-F5 or MC-F10 with MC-IT5 tool. Option: screw fix with #4 CSK screws

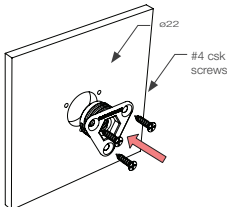
- 2 Clip MC-SM5-VHB into female clip, and remove protective backing from adhesive

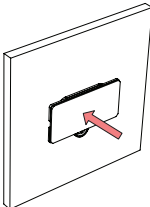
- 3 Align panel into correct position and press firmly against substrate to fix.

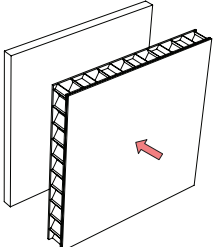

MORE INFO: SETOUT GUIDE TD-02, 09, 12. PRODUCT SHEET MC-05