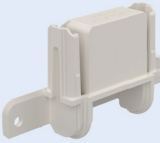# STRATLOCK SL RANGE
SL-C-WC90-FR HOW TO FIT CONNECTOR INSTALLATION GUIDE
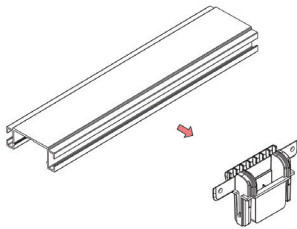
SL-C-WC90-FR
HOW TO FIT CONNECTOR to SL-RLE
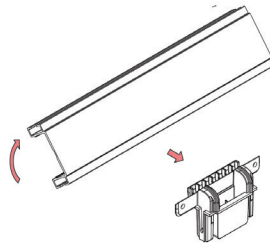
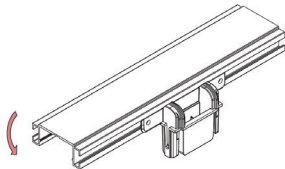| SL-C-WC90-FR	SL-RLE	USE WITH:	INSTALL WITH:
		8G panhead self tappers	1/8" drill bit

INSTALLATION STEPS
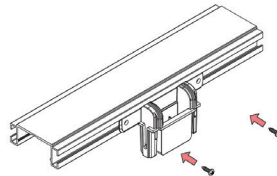
1 Clip perpendicular SL-RLE onto SL-C-WC90-FR

2

3

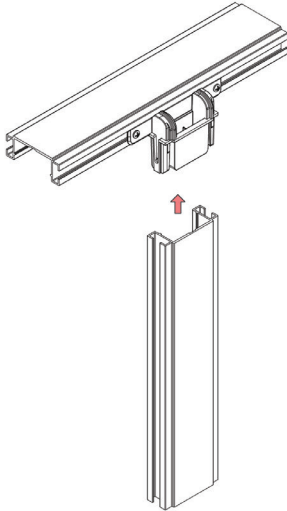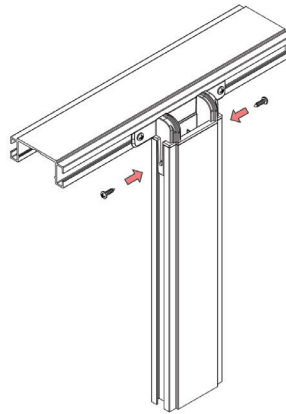**4** Secure SL-RLE in position with 8G self-tapping panhead screws

5 Slot SL-RLE onto SL-C-WC90-FR

6 Secure SL-RLE in position with 8G self-tapping panhead screws

7