

STRATLOCK SL RANGE

SL-C-WC90-FR HOW TO FIT CONNECTOR INSTALLATION GUIDE


SL-C-WC90-FR

HOW TO FIT CONNECTOR to SL-RLE


SL-C-WC90-FR 	SL-RLE 	USE WITH: 8G panhead self tappers	INSTALL WITH: 3mm drill bit
--	--	---	---------------------------------------

INSTALLATION STEPS


- 1** Clip perpendicular SL-RLE onto SL-C-WC90-FR

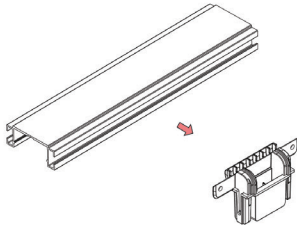


2

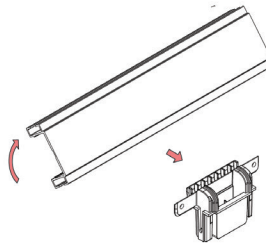

3

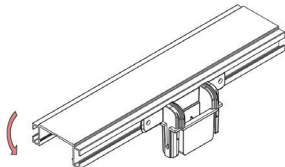


- 4** Secure SL-RLE in position with 8G self-tapping panhead screws

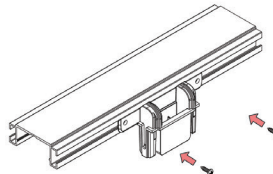


STRATLOCK SL RANGE

SL-C-WW90-FR HOW TO FIT CONNECTOR INSTALLATION GUIDE

- 5 Slot SL-RLE onto
SL-C-WC90-FR

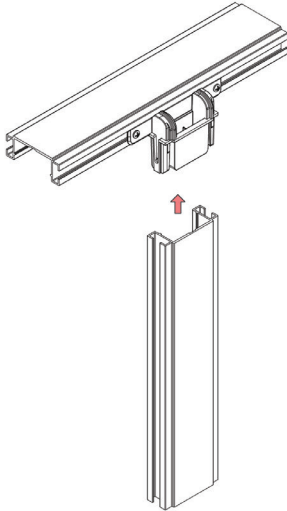

- 6 Secure SL-RLE in position with
8G self-tapping panhead screws

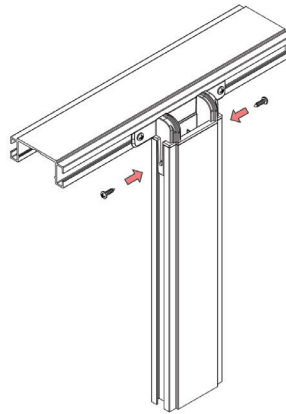

7

