





STRATLOCK SL RANGE

SL-FC & SL-FC-FR INSTALLATION GUIDE


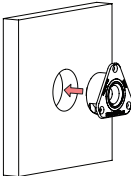
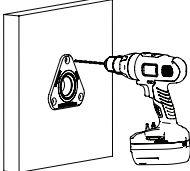
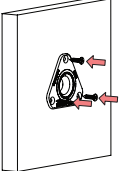

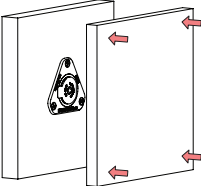
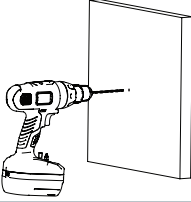
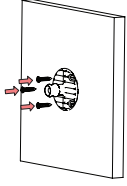
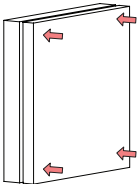
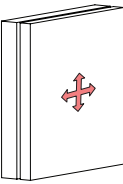
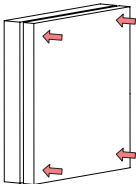
SL-FC Stratlock® Range - Screw Fix

SL-FC-FR Stratlock® Range - screw fix - Fire Rated

SL-FC	SL-FC-FR	USE WITH:	INSTALL WITH:
		<p>SL-M10, SL-M18, SL-M18-FR</p> 	<p>#5 screws #8 screws CP-01ST</p> 

INSTALLATION STEPS



Screw-fix method - follow same steps for fire-rated Stratlock clips

<p>1 Drill out 40mm hole</p> 	<p>2 Press SL-FC into hole</p> 	<p>3 Pre-drill 2.5-3mm holes depending on substrate density</p> 	<p>4 Fasten SL-FC with 3 x #5 screws</p> 
<p>5 Fit CP-01ST into SL-FC</p> 	<p>6 Position panel and press firmly against CP-01ST to mark position of male clip</p> 	<p>7 Drill out mark created by CP-01ST with drill bit according to fitting preference (1 or 3 screws)</p> 	<p>8 Install SL-M18 / SL-M10 with either 1 x #8 screw or 3 x 5 screws according to preference.</p> 
<p>9 Engage panel to first click of SL-M18/SL-M10</p> 	<p>10 Adjust panel to find desired position</p> 	<p>11 Once panel is in correct location, engage second click by pressing panel into final position</p> 	

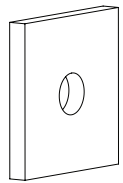
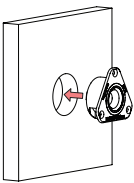
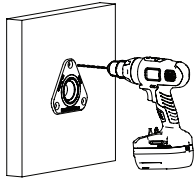
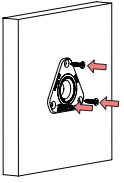
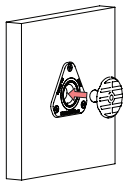
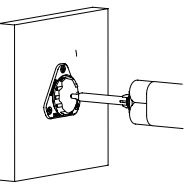
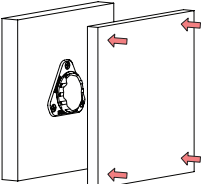
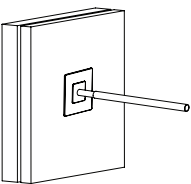
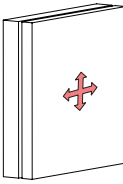
STRATLOCK SL RANGE

SL-FC INSTALLATION GUIDE

SL-FC Stratlock® Range - Adhesive Fix

<p>SL-FC</p> 	<p>USE WITH:</p> <p>SL-M10, SL-M18</p> 	<p>INSTALL WITH:</p> <p>A 2 part epoxy adhesive #5 screws</p>
---	---	--

INSTALLATION STEPS Adhesive fix method

<p>1 Drill out 40mm hole</p> 	<p>2 Fit SL-FC into hole</p> 	<p>3 Pre-drill 2.5-3mm holes depending on substrate density</p> 	<p>4 Fasten SL-FC with 3 x #5 screws</p> 
<p>5 Clip SL-M18 / SL-M10 into SL-FC</p> 	<p>6 Apply 2 part epoxy adhesive to the back of male clip</p> 	<p>7 Press panel against clips in desired position</p> 	<p>8 Support panel in place while adhesive dries</p> 
<p>9 Use CT-05 to disengage panel. To replace, engage one click and adjust panel to find correct position</p> 	<p>10 Once panel is in correct location, engage second click by pressing panel into final position</p> 